

# ASSEMBLY INSTRUCTIONS




**New England**  
Arbors

Leadership by Design

[www.newenglandarbors.com](http://www.newenglandarbors.com)

[www.newenglandarbors.co.uk](http://www.newenglandarbors.co.uk)

## The Cambridge Raised Planter Box

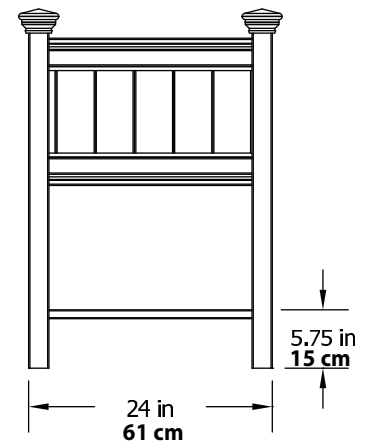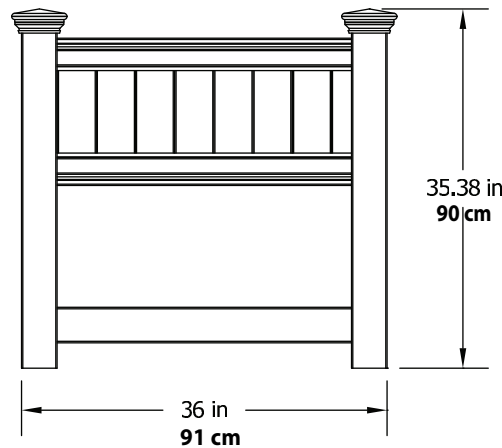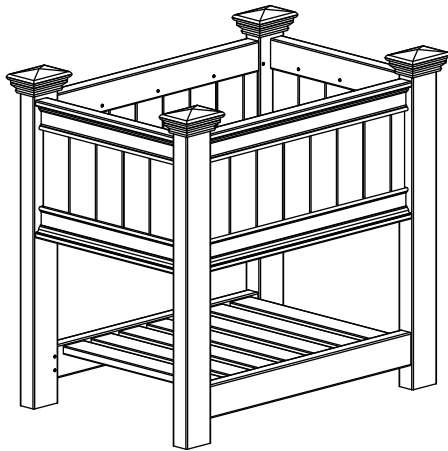


**Please read through before starting assembly.**

**Planter Box Dimensions are 32"L x 20"W x 10"D (81 cm L x 51 cm W x 25 cm D)  
(± 3.7 cubic feet (0.1 cubic Meter) / 0.14 cubic yards / 105 litres)**

### Check Box for These Contents


In the event of missing or defective parts please call our customer service dept. at **1 800 282 9346** (Mon. to Fri. 8:00 AM to 4:00 PM EST).  
(UK Tel: **(44) 2038 687160** - Mon. to Fri. 1:00 PM to 10:00 PM GMT).

1. Pre-Assembled Side Wall Panels with Posts Connected (2) - 10873
2. Floor Panels (4) - 10871
3. Floor Support (1) - 10872
4. Front and Back Wall Panels (2) - 10870
5. Pre-assembled Shelf (1) - 10874
6. Post Caps (4) - 10611
7. 5/8" (1.6 cm) Stainless Steel Screws (12) - 20016
8. 1 1/2" (4 cm) Stainless Steel Screws (8) - 20005

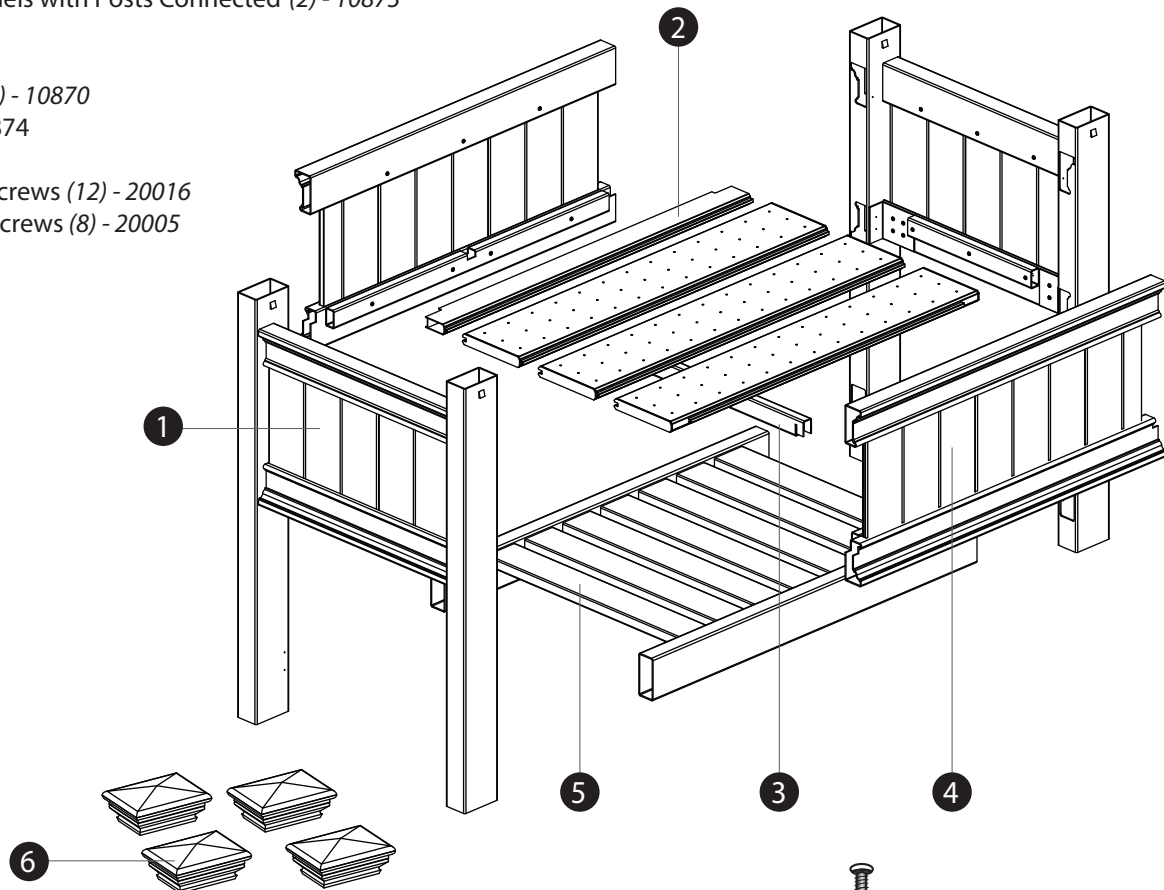

### General Information

- **Read Instructions through carefully before beginning assembly.**
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 4'x 8' (1.2 m x 2.4 m) for unobstructed assembling.
- You should not need to use excessive force when assembling components.

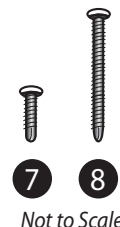

Not to Scale

Ver 3.5/020817

## STEP ONE

1

Lay the Pre-Assembled Side Wall Panel on the floor as shown and align and insert the pre-assembled shelf into the routed hole.

Do the same for the Front and Back Wall Panels as shown.

This is designed to accommodate the attachment of an extension kit (sold separately).

2


Align and insert the second Pre-Assembled Side Wall Panel as shown.

3


Stand the planter box up. Center the shelf within the side panel posts and fasten the shelf rails to the posts using 8 of the 5/8" (1.6 cm) screws provided through the pre-drilled holes as shown.

Note Position of Bottom Rails


1

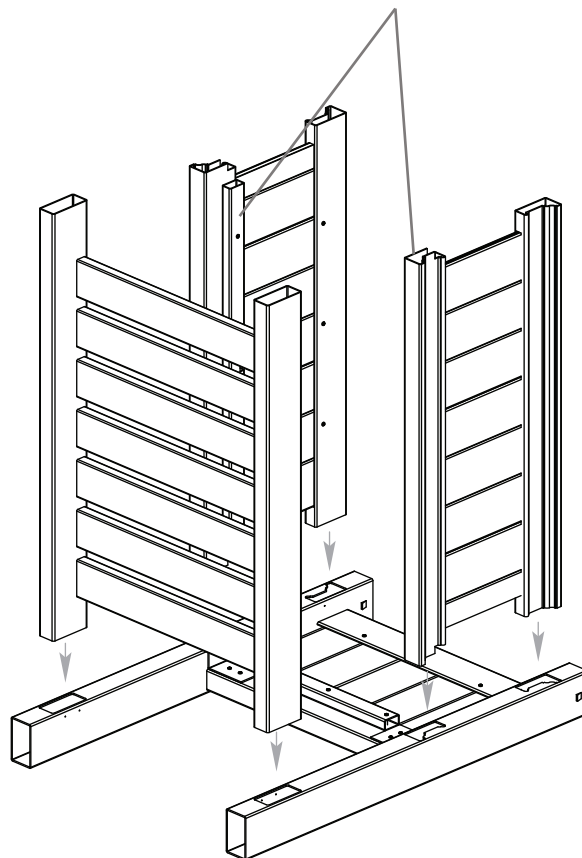

2

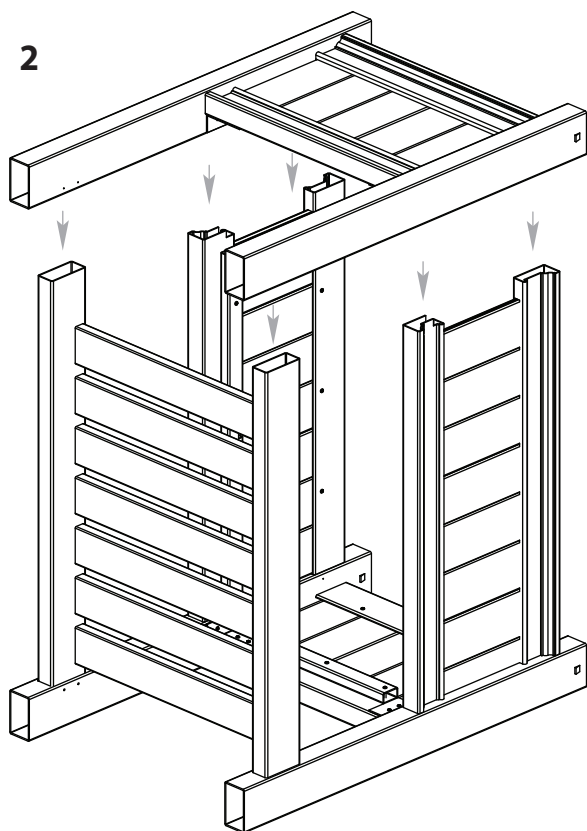

3

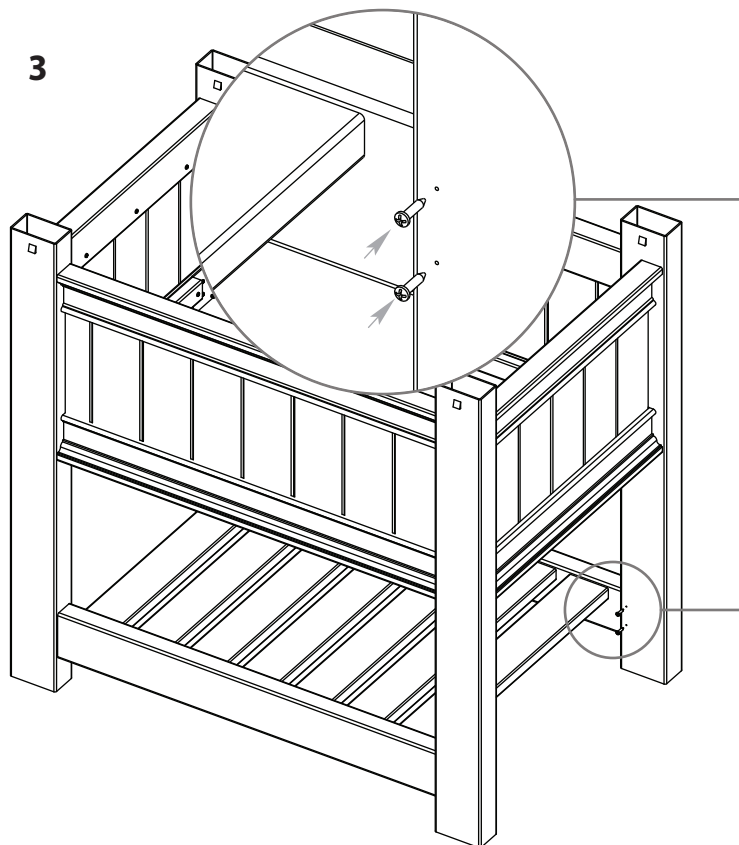

**New England**  
Arbors

Leadership by Design

[www.newenglandarbors.com](http://www.newenglandarbors.com)

[www.newenglandarbors.co.uk](http://www.newenglandarbors.co.uk)


## STEP ONE (CONT'D)

4


Fasten the wall panels together using 4 of the 5/8" (1.6 cm) screws provided through the pre-drilled holes on the posts as shown.

5


Fasten the corner brackets to the posts using 8 of the 1 1/2" (4 cm) screws provided through the pre-drilled holes on the brackets as shown.

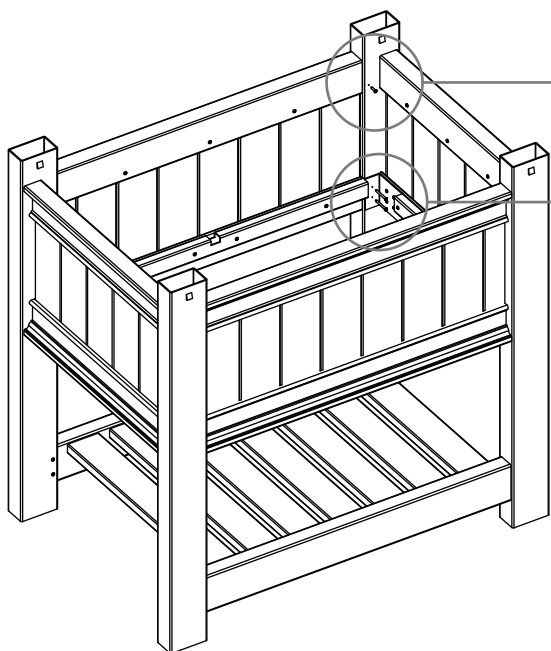

4

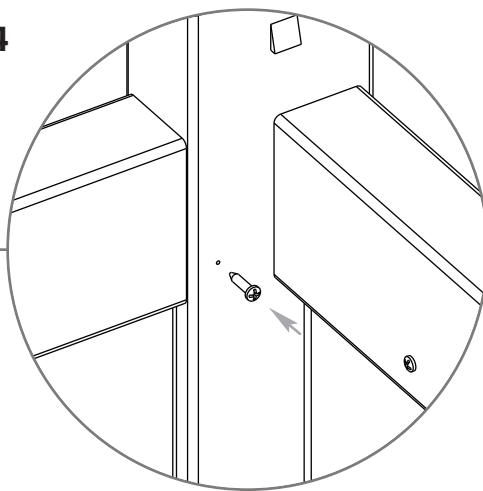

5


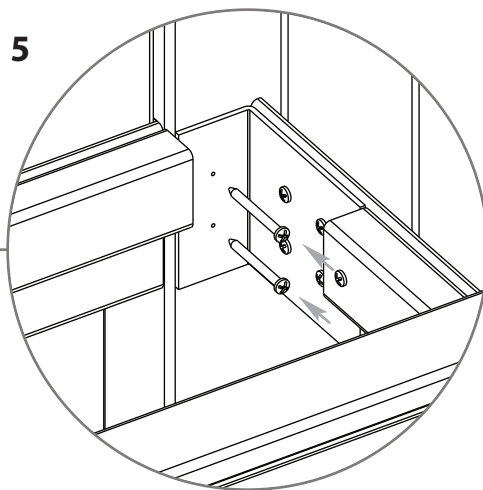


## STEP TWO

6

Insert the floor support rail into the front and rear walls as shown.  
**Note** the notch at the ends of the floor support rail.

6

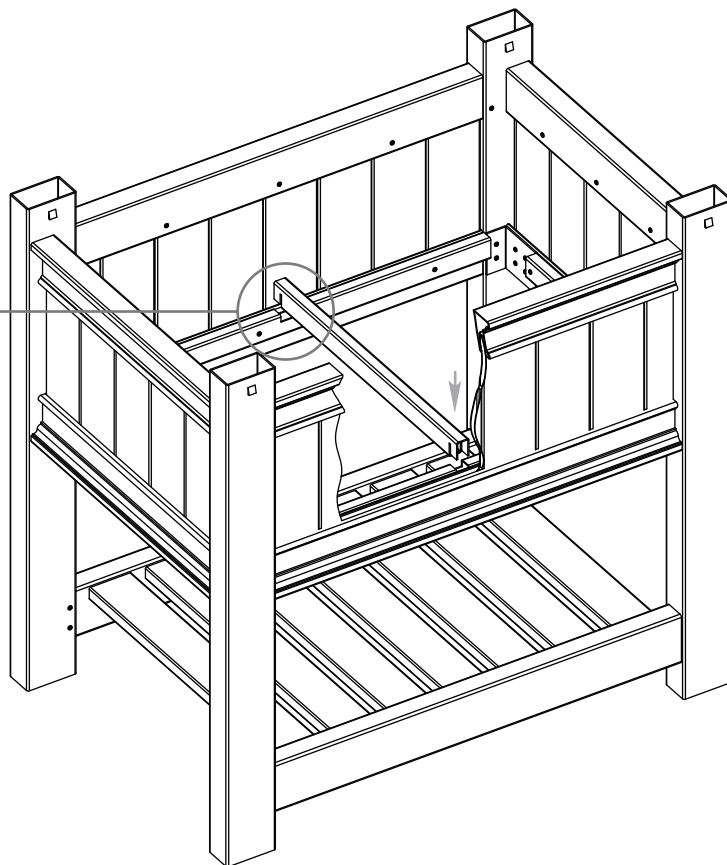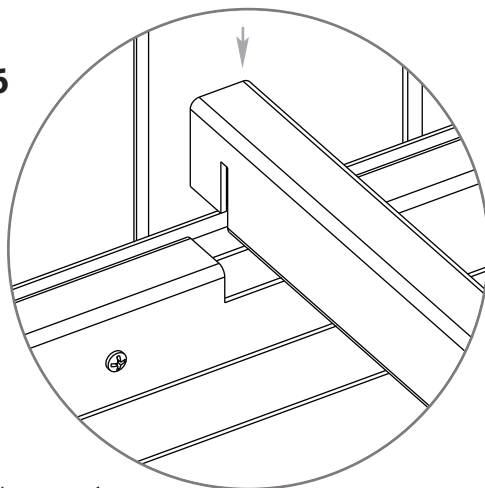



## STEP TWO (CONT'D)

7


Place the four floor panels onto the floor supports as shown. Note the notches on the one side of the end panels. The notches are to wrap around the posts.

8



Pressure fit the Post Caps into place. Push firmly until they snap into place.

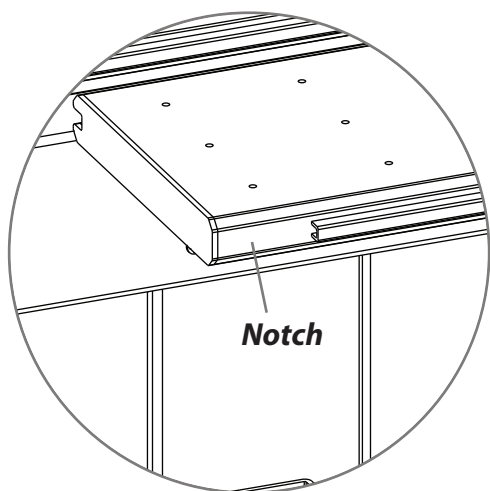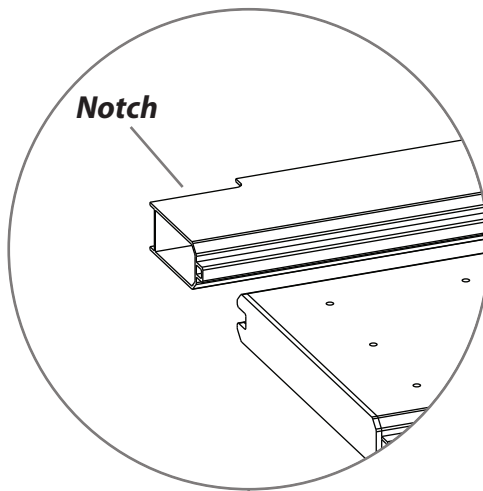

7

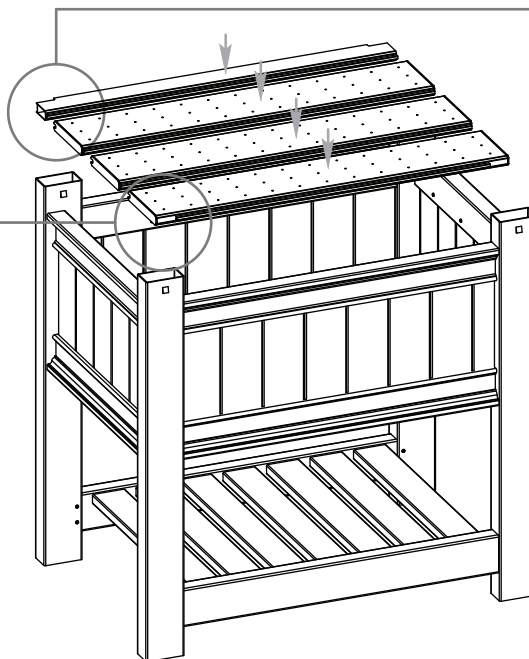

8

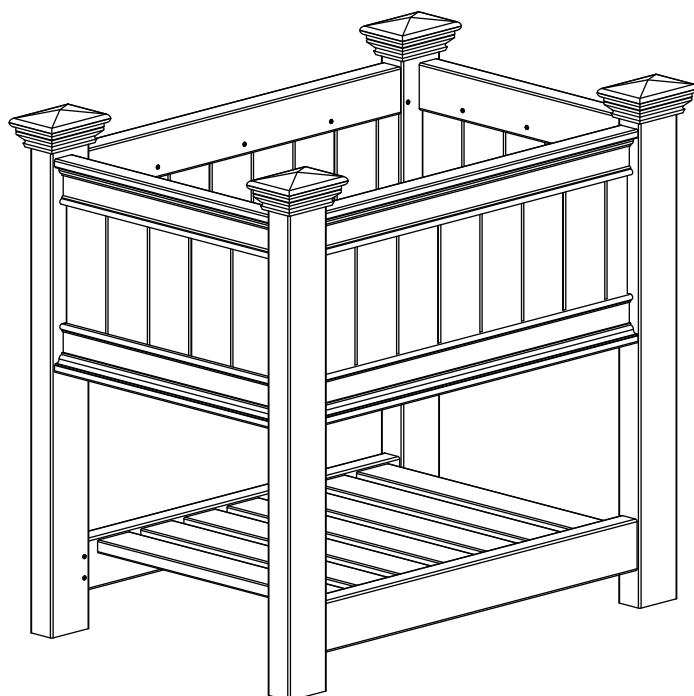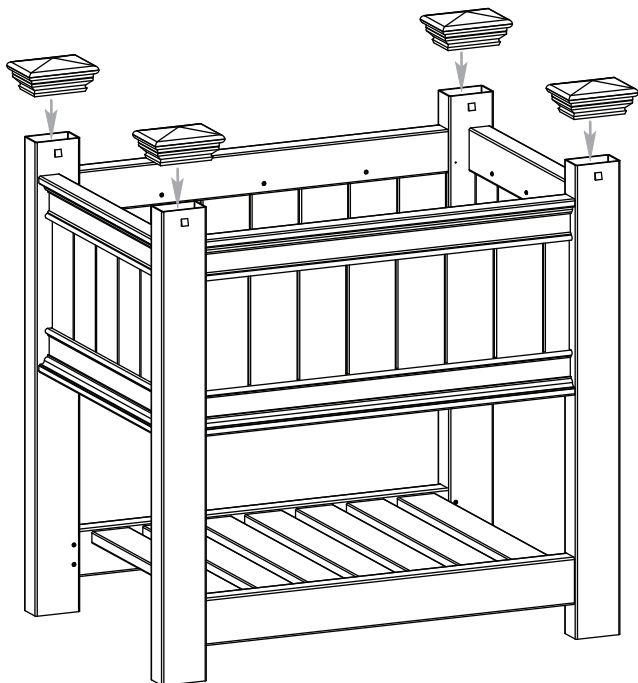

**New England**  
Arbors  
Leadership by Design